



Originalfernbedienung Ersatzfernbedienung

	Standby / On		Power
	Function		List
	Open / Close		Eject
	Home Media		Media
	Karaoke		Guide
	Mic Vol+		Ch +
	Mic Vol-		Ch -
	Resolution		Format
	Net Contents		Shift + Media
	Key Lock		Pre Ch
	Dimmer		Shift + Mute
	Sleep		Sleep
	Exit		Exit
	Virtual 3D Sound		3D
	Sound		Dual
	Sound Retriever		Shift + Dual
	CD/SACD		AV

Originalfernbedienung Ersatzfernbedienung

	USB Rec		Rec
	Display		Info
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Top Menu		D. Menu
	Menu / PopUp		Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Home Menu		Smart
	Return		Back
	Tools		Options
	Continued		Shift + Play
	Skip Search		Shift + Right





Originalfernbedienung Ersatzfernbedienung

	REV		<<
	Play		Play
	FWD		>>
	I<< / < / <		I<<
	Pause		Pause
	Stop		Stop
	>> / > / >		>>
	Audio		TV/R
	Subtitle		Subt
	Angle		Shift + Format
	Repeat		Text
	A-B		Shift + Text
	1		1
	2		2
	3		3
	4		4
	5		5

Originalfernbedienung Ersatzfernbedienung

	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Shift + Exit
	Program / Red		Red
	Program / Red		Shift + Sleep
	RDS / Bookmark / Green		Green
	PTY / Zoom /		Yellow
	PTY / Zoom /		Shift + Eject
	Index / Blue		Blue
			
			
			
			
			

