
 








Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-----------|
|  | Standby / On |  | Power |
|  | Sleep |  | Sleep |
|  | Dimmer |  | Blue |
|  | ECO |  | 3D |
|  | BD |  | 1 |
|  | GAME |  | 2 |
|  | DVR / BDR |  | 3 |
|  | DVD |  | 4 |
|  | SAT / CBL |  | 5 |
|  | HDMI |  | 6 |
|  | MHL |  | Shift + 6 |
|  | iPod / USB |  | 7 |
|  | CD |  | 8 |
|  | ADPTER |  | 9 |
|  | TUNER |  | Guide |
|  | TV |  | 0 |
|  | NETWORK |  | Pre Ch |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|------------|
|  | i / Status |  | Info |
|  | Speakers |  | List |
|  | PHASE |  | Shift + 3D |
|  | Signal Sel. |  | AV |
|  | Auto / Direct |  | TV/R |
|  | Standard |  | Format |
|  | Adv. Surr. |  | Subt |
|  | Mute |  | Mute |
|  | Tools Menu |  | Options |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | Ok |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Home Menu |  | Menu |
|  | iPod Ctrl. |  | D. Menu |
|  | Return |  | Back |

 

 


 
 
 

 


 
 
 



 

 
 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|----------------|
|  | Volume+ |  | Vol + |
|  | Volume- |  | Vol - |
|  | Pause |  | Pause |
|  | BAND |  | Shift + Play |
|  | Play |  | Play |
|  | PTY |  | Shift + Stop |
|  | Stop |  | Stop |
|  | +Fav |  | Shift + Pre Ch |
|  | Preset - |  | Shift + I<< |
|  | I<< |  | I<< |
|  | Preset+ |  | Shift + >>I |
|  | >>I |  | >>I |
|  | Tune- |  | Shift + <<< |
|  | <<< |  | <<< |
|  | Tune+ |  | Shift + >>> |
|  | >>> |  | >>> |
|  | Repeat |  | Shift + Text |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------|---|---------------|
|  | Random |  | Text |
|  | Disp |  | Shift + Info |
|  | Audio |  | Dual |
|  | SB CH |  | Media |
|  | CH Level CH Sel |  | Smart |
|  | CH Level- |  | Ch - |
|  | CH Level+ |  | Ch + |
|  | Bass- |  | Shift + Down |
|  | Bass+ |  | Shift + Up |
|  | Treble- |  | Shift + Left |
|  | Treble+ |  | Shift + Right |

