































 



































**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Smart Tv		Smart / List
	0		0
	Guide		Guide / EPG / -/-
	Menu		Menu / Home
	Source		AV / Input / RDS
	Up		Up













 



 





**Originalfernbedienung    Ersatzfernbedienung**

	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Info		Info / Angle
	P+		CH+ / Page+
	Vol-		Vol-
	Option		Setup / OPT /
	P-		CH- / Page-
	TV		TV/Radio /
	Audio		Audio / Lang I/II
	Text		Text / Goto
	Subtitle		Subtitle / EQ
	List		Shift + Smart / List





**Originalfernbedienung    Ersatzfernbedienung**

	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	PRE-CH		Fav / Marker / PC
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

**Originalfernbedienung    Ersatzfernbedienung**