
























 








Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|------------------|
|  | Power |  | Power |
|  | S.Mode |  | Sound / Title |
|  | MTS |  | Text / Goto |
|  | P.Mode |  | Picture / Format |
|  | Caption |  | Subtitle / EQ |
|  | Sleep |  | Sleep / Timer |
|  | P.Size |  | Zoom / Size |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|-----------------------|
|  | Jump |  | Smart / List |
|  | . |  | Display / Media |
|  | Mute |  | Mute / Dimmer |
|  | Input |  | AV / Input / RDS |
|  | Vol+ |  | Vol+ |
|  | Vol- |  | Vol- |
|  | CH+ |  | CH+ / Page+ |
|  | CH- |  | CH- / Page- |
|  | Guide |  | Guide / EPG / -/- |
|  | Exit |  | Exit / Cancel / Clear |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Down |  | Shift + Down |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Info |  | Info / Angle |
|  | Menu |  | Menu / Home |





| Originalfernbedienung | | Ersatzfernbedienung | | Originalfernbedienung | | Ersatzfernbedienung | |
|-----------------------|--------|---------------------|-----------------------------|-----------------------|--|---------------------|--|
| | Red | | Red / Netflix / Search | | | | |
| | Green | | Green / APP / Repeat | | | | |
| | Yellow | | Yellow / YouTube / Repeat | | | | |
| | Blue | | Blue / Prime Video / Random | | | | |
| | List | | Shift + Smart / List | | | | |
| | FAV CH | | Fav / Marker / PC | | | | |
| | Timer | | Shift + Sleep / Timer | | | | |
| | Freeze | | Pause / Step / Freeze | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

