




 
 



 

 




 







 







 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Tv/Rad		TV/R
	Camera		3D
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	EPG		Guide
	RCL		Smart
	P/Pg+		Ch +

Originalfernbedienung Ersatzfernbedienung

	P/Pg-		Ch -
	Menu		Menu
	Exit		Exit
	Vol+		Vol +
	Vol-		Vol -
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	V		AV
	i		Info
	Messages		Shift + 1
	Music		Shift + 2
	Movie		Shift + 3
	FAV		Pre Ch
	Red		Red







 






 

 
 
 







Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Rec		Rec
	<<		<<
	Play		Play
	>>		>>
	Recall		Back
	>		Options
	Stop		Stop
	Pause		Pause
	[]]		Format
	[...]		Subt
	[=]		Text
	Sound		Dual





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	EPG		Guide
	RCL		Smart
	Menu		Menu
	Vol+		Vol +
	Vol-		Vol -








 
 



 

 




 







 






Originalfernbedienung Ersatzfernbedienung

	P/Pg+		Ch +
	P/Pg-		Ch -
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Rec		Rec
	[...]		Subt
	[≡]		Text






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Tv/Rad		TV/R
	Camera		3D
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	EPG		Guide
	RCL		Smart
	P/Pg+		Ch +

Originalfernbedienung Ersatzfernbedienung

	P/Pg-		Ch -
	Menu		Menu
	Exit		Exit
	Vol+		Vol +
	Vol-		Vol -
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	V		AV
	i		Info
	Messages		Shift + 1
	Music		Shift + 2
	Movie		Shift + 3
	FAV		Pre Ch
	Red		Red





Originalfernbedienung Ersatzfernbedienung

	Green		Green
	Yellow		Yellow
	Blue		Blue
	Rec		Rec
	<<		<<
	Play		Play
	>>		>>
	Recall		Back
	>		Options
	Stop		Stop
	Pause		Pause
	[]		Format
	[...]		Subt
	[=]		Text
	Sound		Dual

Originalfernbedienung Ersatzfernbedienung

