

 
 











 
 
 

 
 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	Stop		Stop
	TV/TXT		Text
	Cancel		Eject
	Reveal		D. Menu
	Hold		Media
	Size		3D
	Subpage		Shift + Subt
	Index		List
	Red		Red
	Green		Green

Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow
	Blue		Blue
	CH+		Ch +
	CH-		Ch -
	Source		AV
	Vol+		Vol +
	Vol-		Vol -
	Menu		Menu
	Rec		Rec
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	DVB		Smart
	Exit		Exit
	1		1





Originalfernbedienung Ersatzfernbedienung

2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
-/--	-/--	SHIFT + -/-- GUIDE	Shift + Guide
↺	Recall	RETURN BACK	Back
PICTURE	Picture	SHIFT + PICTURE FORMAT	Shift + Format
SOUND	Sound	SHIFT + SOUND DUAL	Shift + Dual
NICAM/A2	Nicam/A2	SETTINGS OPT	Options
MUTE	Mute	MUTE	Mute
SLEEP	Sleep	PROG SLEEP	Sleep
TV/RADIO	Tv/Radio	SEARCH TV/R	TV/R

Originalfernbedienung Ersatzfernbedienung

FAV	FAV	FAV PRE-CH	Pre Ch
FAV+	FAV+	SHIFT + + CH	Shift + Ch +
FAV-	FAV-	SHIFT + - CH	Shift + Ch -
SUBTITLE	Subtitle	AD SUBT	Subt
PIC FORMAT	Pic Format	PICTURE FORMAT	Format
TEXT	Text	SHIFT + REPEAT TEXT	Shift + Text
DISPLAY	Display	DISPLAY INFO	Info
LANGUAGE	Language	SOUND DUAL	Dual
EPG	EPG	-/-- GUIDE	Guide

