



Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Recall		Back / Return
	0		0
	List		Smart / List
	Vol+		Vol+
	Info/Display		Display / Media
	Info/Display		Info / Angle

Originalfernbedienung Ersatzfernbedienung

	CH+		CH+ / Page+
	Vol-		Vol-
	Zoom/Aspect		Shift + Zoom /
	Zoom/Aspect		Picture / Format
	CH-		CH- / Page-
	Menu		Menu / Home
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	OK/Enter		OK
	Right		Right
	Sleep		Sleep / Timer
	Down		Down
	Source		AV / Input / RDS
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat



