



Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Eject		Eject / Surround
	Source		AV / Input / RDS
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/10		0

Originalfernbedienung Ersatzfernbedienung

	Recall/+10		Back / Return
	FAV/Program		Fav / Marker / PC
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Display		Display / Media
	D.Setup		Setup / OPT /
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Vol-		Vol-
	Vol+		Vol+
	CH-		CH- / Page-
	CH+		CH+ / Page+
	Red/Goto		Red / Netflix / Search
	Green/A-B		Green / APP / Repeat



