


 


 


 
 
 
 
 




 
 

 


 

 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	P.Mode	 + 	Shift + Format
	S.Mode	 + 	Shift + Dual
	I / II		Dual
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	CH.List		List
	Recall		Back

Originalfernbedienung Ersatzfernbedienung

	Source		AV
	Menu		Menu
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Info		Info
	Exit		Exit
	Vol +		Vol +
	Vol -		Vol -
	Mute		Mute
	Aspect		Format
	CH +		Ch +
	CH -		Ch -
	Play/Pause / EPG		Guide
	Play/Pause / EPG		Play











Originalfernbedienung Ersatzfernbedienung

	Play/Pause / EPG		Pause
	Stop / Fav		Pre Ch
	Stop / Fav		Stop
	Add / Del		TV/R
	Media		Media
	I<< / TTX		Text
	I<< / TTX		I<<
	<< / Cancel		<<
	<< / Cancel	 + 	Shift + Exit
	Size		Eject
	Subtitle		Subt
	>>I / Hold		>>I
	>>I / Hold	 + 	Shift + Stop
	>> / Reveal		>>
	Subpage	 + 	Shift + Subt
	Index	 + 	Shift + Info
	Red		Red

Originalfernbedienung Ersatzfernbedienung

	Green		Green
	Yellow		Yellow
	Blue		Blue

