 







 

 
 




 





Originalfernbedienung    Ersatzfernbedienung

|   |             |   |                           |
|---|-------------|---|---------------------------|
|    | POWER       |    | Power                     |
|    | MUTE        |    | Mute / Dimmer             |
|    | P. MODE     |    | Picture / Format          |
|    | S. MODE     |    | Sound / Title             |
|    | TV / RADIO  |    | TV/Radio /                |
|    | NICAM       |    | Shift + Audio / Lang I/II |
|    | DISPLAY     |    | Display / Media           |
|    | ZOOM / PC.A |    | Shift + Zoom /            |
|    | SLEEP       |    | Sleep / Timer             |
|    | EDIT        |    | Shift + Text /            |
|   | 1           |   | 1                         |
|  | 2           |  | 2                         |
|  | 3           |  | 3                         |
|  | 4           |  | 4                         |
|  | 5           |  | 5                         |
|  | 6           |  | 6                         |
|  | 7           |  | 7                         |

Originalfernbedienung    Ersatzfernbedienung

|   |              |   |                            |
|---|--------------|---|----------------------------|
|    | 8            |    | 8                          |
|    | 9            |    | 9                          |
|    | -/--         |    | Shift + Guide / EPG / -/-- |
|    | 0            |    | 0                          |
|    | BACK         |    | Back / Return              |
|    | REC. MENU    |    | D.Menu / Top               |
|    | PLAY / PAUSE |    | Play / Slow                |
|    | SKIP PREV    |    | I<< / Preset-              |
|    | SKIP NEXT    |    | >>I / Preset+              |
|    | REC          |    | Rec / Rec Mode             |
|   | STOP         |   | Stop / Hold                |
|  | REW          |  | << / Tune-                 |
|  | FWD          |  | >> / Tune+                 |
|  | CH+          |  | CH+ / Page+                |
|  | SOURCE       |  | AV / Input / RDS           |
|  | VOL+         |  | Vol+                       |
|  | CH-          |  | CH- / Page-                |





**Originalfernbedienung    Ersatzfernbedienung**

|  |                       |  |                       |
|--|-----------------------|--|-----------------------|
|  | VOL-                  |  | Vol-                  |
|  | MENU                  |  | Menu / Home           |
|  | EXIT                  |  | Exit / Cancel / Clear |
|  | UP                    |  | Up                    |
|  | LEFT                  |  | Left                  |
|  | OK                    |  | OK                    |
|  | RIGHT                 |  | Right                 |
|  | DOWN                  |  | Down                  |
|  | FAV                   |  | Fav / Marker / PC     |
|  | EPG                   |  | Guide / EPG / -/--    |
|  | USB                   |  | Shift + 8             |
|  | SETUP / ON/OFF        |  | Setup / OPT /         |
|  | MIX / MENU            |  | Smart / List          |
|  | INDEX / PCB           |  | Text / Goto           |
|  | ZOOM / SIZE           |  | Zoom / Size           |
|  | REVEAL / SUBT. / REP. |  | Shift + Green / APP / |
|  | SUB. T.               |  | Subtitle / EQ         |

**Originalfernbedienung    Ersatzfernbedienung**

|  |                       |  |                             |
|--|-----------------------|--|-----------------------------|
|  | UPDATE / A-B          |  | Shift + Yellow / YouTube /  |
|  | SUBPAGE /             |  | Audio / Lang I/II           |
|  | HOLD / FRE. / SUB. T. |  | Shift + Stop /              |
|  | RED / INFO            |  | Shift + Info / Angle        |
|  | RED / INFO            |  | Red / Netflix / Search      |
|  | Green / Angle         |  | Info / Angle                |
|  | Green / Angle         |  | Green / APP / Repeat        |
|  | YELLOW / SLOW         |  | Yellow / YouTube / Repeat   |
|  | BLUE / EJECT          |  | Blue / Prime Video / Random |
|  | EJECT                 |  | Eject / Surround            |
|  |                       |  |                             |
|  |                       |  |                             |
|  |                       |  |                             |
|  |                       |  |                             |
|  |                       |  |                             |
|  |                       |  |                             |
|  |                       |  |                             |
|  |                       |  |                             |
|  |                       |  |                             |

