





 


 

 




 

 


 
 






 




 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|----------------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | P.Mode |  +  | Shift + Format |
|  | S.Mode |  | Dual |
|  | Nicam / A2 |  +  | Shift + Dual |
|  | Sleep |  | Sleep |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | -/-- |  | Guide |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|---------|
|  | Recall / Mouse |  | Back |
|  | FAV |  | Pre Ch |
|  | Red |  | Red |
|  | Settings |  | Options |
|  | Home |  | Smart |
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
|  | Source |  | AV |
|  | Info |  | Info |
|  | Up |  | Up |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Menu |  | Menu |
|  | Exit |  | Exit |





Originalfernbedienung **Ersatzfernbedienung**

| | | | |
|--|-------------------|---|-----------------|
| | Vol + | | Vol + |
| | Vol - | | Vol - |
| | Media | | Media |
| | TV / Radio | | TV/R |
| | CH + | | Ch + |
| | CH - | | Ch - |
| | Play/Pause / Text | | Play |
| | Play/Pause / Text | | Pause |
| | Play/Pause / Text | | Text |
| | << / Size | | << |
| | << / Size | | Eject |
| | >> / Reveal | | >> |
| | Stop / Hold | | Stop |
| | I<< / Index | | I<< |
| | >>I / Subpage | | >>I |
| | Cancel | + | Shift + Exit |
| | Subtitle | | Subt |

Originalfernbedienung **Ersatzfernbedienung**

| | | | |
|--|--------|---|------------------|
| | Auto | + | Shift + Media |
| | Repeat | + | Shift + Text |
| | A-B | + | Shift + Play |
| | Aspect | | Format |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

