



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|--------------------|
|  | PP |  | Back / Return |
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | P<P |  | Fav / Marker / PC |
|  | 0 |  | 0 |
|  | -- |  | Guide / EPG / -/-- |
|  | Menu [M] |  | Menu / Home |
|  | Info [i] |  | Info / Angle |
|  | I-II |  | Audio / Lang I/II |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------|---|-----------------------------|
|  | Mute |  | Mute / Dimmer |
|  | Left |  | Left |
|  | Up |  | Up |
|  | Right |  | Right |
|  | OK |  | OK |
|  | Down |  | Down |
|  | V - |  | Vol- |
|  | V + |  | Vol+ |
|  | P - |  | CH- / Page- |
|  | P + |  | CH+ / Page+ |
|  | Red / Sound |  | Red / Netflix / Search |
|  | Red / Sound |  | Sound / Title |
|  | Green / Picture |  | Green / APP / Repeat |
|  | Green / Picture |  | Picture / Format |
|  | Yellow / Feature |  | Yellow / YouTube / Repeat |
|  | Blue / Install |  | Blue / Prime Video / Random |
|  | Text |  | Text / Goto |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-----------------|--|-----------------------|
| | [≡o] | | Sleep / Timer |
| | Hold | | Stop / Hold |
| | [≡X] | | Exit / Cancel / Clear |
| | Mix / PIP Swap | | Smart / List |
| | PIP / Size | | Zoom / Size |
| | PIP Down / [≡?] | | I<< / Preset- |
| | PIP Up / Index | | >>I / Preset+ |
| | [TV] | | TV/Radio / |
| | [AV] | | AV / Input / RDS |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

