



Originalfernbedienung	Ersatzfernbedienung
MUTE	Mute / Dimmer
Power	Power
SLEEP	Sleep / Timer
Vol+	Vol+
EQ	Subtitle / EQ
Timer	Shift + Sleep / Timer
Vol-	Vol-
Band	D.Menu / Top
Prog/Mem	TV/Radio /
Rand	Blue / Prime Video / Random
Intro	OK
Repeat	Green / APP / Repeat
Play	Play / Slow
Pause	Pause / Step / Freeze
I<<	I<< / Preset-
>>I	>>I / Preset+
Stop	Stop / Hold

Originalfernbedienung	Ersatzfernbedienung
Album/Presets-	CH- / Page-
Album/Presets+	CH+ / Page+
ST/Mono/Find	Sound / Title

