





 

 
 

 

 






Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Teletex		Text
	Red		Red
	Green/[] Smart		Green
	Yellow/Smart		Yellow
	Blue		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit

Originalfernbedienung Ersatzfernbedienung

	Timer		AV
	Menu		Menu
	Mute		Mute
	P<P		Pre Ch
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Play		Play
	Stop		Stop
	Record/OTR		Rec
	<<		<<





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
	>>
	> /Index >>
	> </Still Pause

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

