



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Display		Info
	Open / Close		Eject
	Mute		Mute
	VCR		Shift + 1
	TV		Shift + 2
	CDR		Shift + 3
	Tuner		Shift + 4
	DVD		Shift + 5
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	0		0
	Sleep		Sleep
	System Menu		Menu
	Disc Menu		D. Menu
	Exit		Exit
	I<<		I<<
	>>I		>>I
	Tone		Smart
	Mode		Media
	Up / >>		Up
	Up / >>		>>
	Down / <<		<<
	Down / <<		Down
	Right		Right
	Left		Left
	Play		Play





Originalfernbedienung Ersatzfernbedienung

	Play		Ok
	Vol +		Vol +
	Vol -		Vol -
	Stop / FM Mode		Stop
	Stop / FM Mode		Dual
	Pause		Pause

Originalfernbedienung Ersatzfernbedienung

