









 



























Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	Tv/Radio		TV/Radio /
	4		4
	5		5
	6		6
	↑		CH+ / Page+
	7		7
	8		8
	9		9
	↓		CH- / Page-
	0		0
	←PR		Back / Return
	PAL/NTSC		Picture / Format

Originalfernbedienung Ersatzfernbedienung

	Pause		Pause / Step / Freeze
	EPG		Guide / EPG / -/-
	Up/PR+		Up
	Menu		Menu / Home
	Left		Left
	Vol-		Vol-
	OK/List		OK
	Right		Right
	Vol+		Vol+
	Info		Info / Angle
	Down/PR-		Down
	Exit		Exit / Cancel / Clear
	[+]		Zoom / Size
	FAV		Fav / Marker / PC
	Record		Rec / Rec Mode
	Stop		Stop / Hold
	Audio		Audio / Lang I/II





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
TXT	Text / Goto
Subtitle	Subtitle / EQ
Audio L/R	Sound / Title
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

