



Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	TV / STB		AV
	Mute		Mute
	Recall		Back
	TTXT		Text
	Signal		Smart
	Capture		3D
	Subt		Subt
	Timer		Shift + AV
	I<<		I<<
	<<		<<
	>>		>>
	>>I		>>I
	USB File		Media
	Play / Pause		Play
	Play / Pause		Pause
	Stop		Stop

 


 
 
 
 
Originalfernbedienung Ersatzfernbedienung

	Rec		Rec
	Menu		Menu
	Exit		Exit
	CH+ / PG+		Ch +
	CH- / PG-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Find		Shift + TV/R
	EPG		Guide
	Info		Info
	FAV		Pre Ch
	SAT List		List

 

 
 
 

 

 





Originalfernbedienung Ersatzfernbedienung

 Mosaic	 Format
 CH List	 Shift + List
 TV / Radio	 TV/R
 Feed	 D. Menu
 Red / Pause	 Red
 Red / Pause	 Shift + Pause
 Green / Zoom	 Green
 Green / Zoom	 Eject
 Yellow / Audio	 Yellow
 Yellow / Audio	 Dual
 Blue / Sleep	 Blue
 Blue / Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5

Originalfernbedienung Ersatzfernbedienung

 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

