














 



 

 
 




Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	Exit		Exit
	Up/CH+		Up
	Down/CH-		Down
	Right		Right

Originalfernbedienung    Ersatzfernbedienung

	Left		Left
	OK		Ok
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	SAT		Smart
	FAV		Pre Ch
	EPG		Guide
	[ ]/♪		Dual
	Tv/AV		AV
	Play		Play
	Pause		Pause
	Back		Back
	UHF		TV/R
	i		Info
	PAL/NTSC		Format





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Red/Audio		Red				
	Green/Position		Green				
	Yellow/[...]		Yellow				
	Blue/Audio R/L		Blue				

