




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	DTV/VCR		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Menu		Menu / Home
	0		0
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Up		Up
	CH+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Green		Green / APP / Repeat
	Left		Left
	Vol-		Vol-
	OK		OK
	Right		Right
	Vol+		Vol+
	Yellow		Yellow / YouTube / Repeat
	Down		Down
	CH-		CH- / Page-
	Blue		Blue / Prime Video / Random
	Mute		Mute / Dimmer
	Pause		Pause / Step / Freeze
	Favorite		Fav / Marker / PC
	Recall		Back / Return
	Lang		Shift + Audio / Lang I/II
	Info		Info / Angle
	EPG		Guide / EPG / -/-





Originalfernbedienung

Ersatzfernbedienung

TV/RADIO	Tv/Radio	PROGRAM TV/RADIO	TV/Radio /
AUDIO	Audio	LANG I/II AUDIO	Audio / Lang I/II
TTX	TTX	GOTO TEXT	Text / Goto
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ

Originalfernbedienung

Ersatzfernbedienung

