



 
 
 
 



 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Play / Pause		Play
	Play / Pause		Pause
	Stop		Stop
	I> Step		Shift + Pause
	Rec / B.Mark		Rec
	<< / F1		<<
	>> / F2		>>
	I<< / F3		I<<
	>>I / F4		>>I
	OPT		Options
	EPG / Seek		Guide
	FAV / Repeat		Shift + Text
	FAV / Repeat		Pre Ch
	SAT / (A-B)		AV
	RED / SUB.T		Red

Originalfernbedienung Ersatzfernbedienung

	RED / SUB.T		Subt
	Green / Txt		Green
	Green / Txt		Text
	Yellow / Timer		Yellow
	Yellow / Timer		Shift + AV
	Blue / Audio		Blue
	Blue / Audio		Dual
	Menu		Menu
	Exit		Exit
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Recall		Back
	Info		Info
	Vol +		Vol +





Originalfernbedienung Ersatzfernbedienung

	Vol -		Vol -
	APPS		Smart
	APPS	+	Shift + Media
	USB		Media
	CH + / Page +		Ch +
	CH - / Page -		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0 / Zoom		0
	0 / Zoom		Eject

Originalfernbedienung Ersatzfernbedienung

	VF		Format
	TV / Radio		TV/R

