



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	[≡]/Text		Text / Goto
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	[≡+]		Shift + Stop /
	Stop/Still		Stop / Hold
	Radio		TV/Radio /
	Format		Picture / Format
	<<		<< / Tune-
	Red		Red / Netflix / Search
	>>		>> / Tune+
	Green		Green / APP / Repeat
	I<<		I<< / Preset-
	Yellow		Yellow / YouTube / Repeat
	I>>I		I>>I / Preset+
	Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

	[≡?]/Source		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	[≡i]/Info		Info / Angle
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Index		Setup / OPT /
	CH+		CH+ / Page+
	Vol-		Vol-
	List		Smart / List
	CH-		CH- / Page-
	1		1
	2		2



