





 








 



 
 











 
 
 

 

 

 


 

 
 
 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	OK		OK
	Up		UP
	Down		DOWN
	Right		RIGHT
	Left		LEFT
	Return		BACK
	Play		Play
	Pause		Pause
	Extra		MEDIA
	Mute		MUTE
	Vol+		VOL +
	Vol-		VOL -
	Guide		-/-- / EPG
	CH+		CH +
	CH-		CH -
	Home		VOD

 





 


 

Originalfernbedienung Ersatzfernbedienung

	Source		SRC
	TTX/MIX		TEXT
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PRE-CH		P/C / FAV
	Exit		EXIT
	Info		INFO
	Menu		MENU
	Red		Red (A)





Originalfernbedienung Ersatzfernbedienung

	Green		Green (B)
	Yellow		Yellow (C)
	Blue		Blue (D)
	123		TV/R
	Tools		OPT+
	Stop		Stop
	Rec		Rec
	<</ <<		Rewind
	>>/>>		Fast Forward
	CH List		WIDE
	AD/Subt.		Subt.
	E-Manual		Audio

Originalfernbedienung Ersatzfernbedienung