



 



 

 
 
 
 
 
 
 
 
 
 
 


 







 


 
 
 



 
 

 



 

 
 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	Sports		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text
	PRE-CH		Pre Ch
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

	Mute		Mute
	PR+		Ch +
	PR-		Ch -
	CH.LIST		List
	Menu		Menu
	Smart HUB		Smart
	Guide		Guide
	Tools		Options
	Info		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Return		Back
	Exit		Exit
	Red/A		Red





Originalfernbedienung Ersatzfernbedienung

	Green/B		Green
	Yellow/C		Yellow
	Blue/D		Blue
	E-Manual	 + 	Shift + D. Menu
	Extra		D. Menu
	Search		TV/R
	PIC.Size		Format
	Picture	 + 	Shift + Format
	AD/Subt		Subt
	<</I<<		<<
	Pause		Pause
	>>/>>I		>>
	Rec		Rec
	Play		Play
	Stop		Stop

Originalfernbedienung Ersatzfernbedienung

