 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	Demo/Dimmer		Media
	On/Off Timer		AV
	Timer/Clock		Shift + AV
	DVD		Blue
	Tuner		Yellow
	Port		Green
	AUX		Red
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	0		0
	CD Ripping		Guide
	Cancel		Pre Ch
	I<<		I<<
	Step		3D
	Pause		Pause
	>>I		>>I
	<<		<<
	Stop		Stop
	Play		Play
	>>		>>
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Audio		Dual
	Tuning Up		Ch +



