



**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	TTX / Mix		Text
	TV / DTV		Shift + TV/R
	Guide		Guide
	CH. List		List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	APP		Media
	Pre-CH / Back		Pre Ch

**Originalfernbedienung Ersatzfernbedienung**

	Pre-CH / Back		Back
	Mute		Mute
	Vol +		Vol +
	Vol -		Vol -
	P +		Ch +
	P -		Ch -
	Source		AV
	Menu		Menu
	D.Menu		D. Menu
	Info		Info
	Exit		Exit
	Up		Up
	Left		Left
	Enter / OK		Ok
	Right		Right
	Down		Down
	Red		Red





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Subtitle		Subt
	P.Size		Format
	Sleep		Sleep
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Dual I-II		Dual
	TV / Radio		TV/R
	ALT		Smart
	Text		Shift + Text
	PIP		Options
	Still		Pause
	PIP Swap		3D

