

 
 
 

 

 

 

 

 

 

 

 
 
 
 
 

 
 
 





 

 



 
 


 
 
 

 

 
 



 


 
 






 
 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-------|
|  | Power |  | Power |
|  | Bonusview |  | Media |
|  | Open / Close |  | Eject |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Subtitle |  | Subt |
|  | Audio |  | Dual |
|  | l<< |  | l<< |
|  | >>l |  | >>l |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|--------------|
|  | << |  | << |
|  | >> |  | >> |
|  | Stop |  | Stop |
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | Disc Menu |  | D. Menu |
|  | Menu |  | Menu |
|  | Popup / Title |  +  | Shift + Menu |
|  | Popup / Title |  | List |
|  | Tools |  | Options |
|  | Info |  | Info |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | Ok |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Return |  | Back |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|---------------|
|  | Exit |  | Exit |
|  | Red |  | Red |
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
|  | Smart HUB |  | Smart |
|  | Search |  | TV/R |
|  | Repeat |  | Text |
|  | TV Power |  +  | Shift + Power |
|  | TV Source |  | AV |
|  | TV Vol + |  | Vol + |
|  | TV Vol - |  | Vol - |
|  | TV Mute |  | Mute |
|  | TV CH + |  | Ch + |
|  | TV CH - |  | Ch - |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

