


 


 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	DVD		Shift + 2
	Tuner Band		Shift + 6
	Aux		Shift + 7
	Open / Close		Eject / Surround
	Title		Shift + Sound / Title
	Menu		Menu / Home
	TV / Video		AV / Input / RDS
	TV Power		Shift + Power
	Audio Mo/St		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	TV Channel -		Shift + CH- /
	TV Channel +		Shift + CH+ /
	Display		Display / Media
	Return		Back / Return
	TV Volume -		Shift + Vol-
	TV Volume +		Shift + Vol+

 














 






 




 





Originalfernbedienung Ersatzfernbedienung

	I<<		I<< / Preset-
	Stop		Stop / Hold
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	>>I		>>I / Preset+
	<< / Tuning		<< / Tune-
	>> / Tuning Up		>> / Tune+
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Volume -		Vol-
	Volume +		Vol+
	DSP/PLII Mode		CH+ / Page+
	DSP/PLII Efect		CH- / Page-
	Mute		Mute / Dimmer






Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep / Timer
	1 / RDS Display		1
	2		2
	3 / TA		3
	Sound Edit		Sound / Title
	4 / PTY -		4
	5 / PTY Search		5
	6 / PTY +		6
	SPK Mode		Smart / List
	7		7
	8		8
	9		9
	Pro Logic II		Shift + Audio / Lang I/II
	Slow		Shift + Play /
	0		0
	Setup		Setup / OPT /
	Test Tone		Shift + Text / Goto

Goto

Originalfernbedienung Ersatzfernbedienung

	Angle		Info / Angle
	Zoom		Zoom / Size
	DRC		D.Menu / Top
	Clear		Exit / Cancel / Clear
	Repeat		Green / APP / Repeat
	Repeat A-B		Yellow / YouTube / Repeat
	Program		TV/Radio /
	Step		Shift + Pause / Step /
	Go To		Text / Goto
	Remain		Picture / Format

