



















 

 

 













Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Sleep		Sleep / Timer
	Screen		Picture / Format
	Presets		Setup / OPT /
	↔		TV/Radio /
	FAV		Shift + Fav / Marker / PC
	Lang		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	TXT		Text / Goto
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung    Ersatzfernbedienung

	9		9
	EPG		Guide / EPG / -/-
	0		0
	Swap		Fav / Marker / PC
	Photo/Music/Movi		D.Menu / Top
	World		Smart / List
	Source		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	C		Exit / Cancel / Clear
	Disp.		Display / Media
	Search Mode		Shift + Red / Netflix /
	Return		Back / Return





**Originalfernbedienung**    **Ersatzfernbedienung**

	CH+		CH+ / Page+
	Info		Info / Angle
	Vol+		Vol+
	CH-		CH- / Page-
	Mute		Mute / Dimmer
	Vol-		Vol-
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	Play		Play / Slow
	Stop		Stop / Hold
	>>		>> / Tune+
	Red/↑/Zoom		Red / Netflix / Search
	Red/↑/Zoom		Zoom / Size
	Green/↓/Repeat		Green / APP / Repeat

**Originalfernbedienung**    **Ersatzfernbedienung**

	Yellow/Root		Yellow / YouTube / Repeat
	Blue/Title		Blue / Prime Video / Random

