













 

 




















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Red / ↑		Red / Netflix / Search
	Green / ↓		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	M		Menu / Home
	Return		Back / Return
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Source		AV / Input / RDS
	Presets		D.Menu / Top
	Info		Info / Angle
	EPG		Guide / EPG / -/-
	Vol+		Vol+

Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV		Shift + Fav / Marker / PC
	0		0
	Recall		Fav / Marker / PC
	Screen		Picture / Format





Originalfernbedienung Ersatzfernbedienung

LANG	Lang	LANG I/II AUDIO	Audio / Lang I/II
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
	(O)	MEDIA DISPLAY	Display / Media
	O/World	LIST SMART	Smart / List
	[≡x]	PROGRAM TV/RADIO	TV/Radio /
	[≡]	GOTO TEXT	Text / Goto

Originalfernbedienung Ersatzfernbedienung

