








 






 

 





 
 

 










Originalfernbedienung Ersatzfernbedienung

	On/Off		Power
	FPlay		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV Guide		Guide
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Picture		Format

Originalfernbedienung Ersatzfernbedienung

	Sound		Dual
	Source		AV
	Ch+		Ch +
	Ch-		Ch -
	Menu		Menu
	Exit		Exit
	Back		Back
	FAV		Pre Ch
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Ok		Ok
	Info		Info
	Text		Text
	Subtitle		Subt
	TV		TV/R





Originalfernbedienung Ersatzfernbedienung

	YouTube		Media
	Netflix		Shift + Smart
	APPS		Shift + Media
	REC/DVD Menu		Rec
	I<<		I<<
	>>I		>>I
	Stop		Stop
	REC List/DVD		List
	<<		<<
	>>		>>
	Play		Play
	Pause		Pause
	Red/GOTO		Red
	Green/A-B		Green
	Yellow/ANGLE		Yellow
	Blue/REPEAT		Blue

Originalfernbedienung Ersatzfernbedienung

