



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	OPC		Smart
	Sleep		Sleep
	Select		Shift + Ok
	[i+]		Info
	[[<>]]		Format
	AV Mode		Shift + AV
	Mute		Options
	Fast Forward		Shift + Options
	Card		Media
	REC Stop		Rec
	3D-Y/C		Shift + 3
	1		1
	2		2
	3		3
	4		4
	5		5

Originalfernbedienung Ersatzfernbedienung

	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	DTV		TV/R
	[...]		Subt
	[≡?]		3D
	[≡i]		Shift + Info
	[≡]		Text
	Sound		Dual
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Input		AV				
	DTV Menu		D. Menu				
	Menu		Menu				
	Guide		Guide				
	List		List				
	Up		Up				
	Left		Left				
	Right		Right				
	OK		Ok				
	Down		Down				
	Exit		Exit				
	Return		Back				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

