




**Originalfernbedienung    Ersatzfernbedienung**

	On/Off		Power
	Freeview Play		Options
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv Guide		Guide
	Picture		Format
	Sound		Dual
	Source		AV
	Vol+		Vol +

**Originalfernbedienung    Ersatzfernbedienung**

	Vol-		Vol -
	Mute		Mute
	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	Exit		Exit
	Back		Back
	FAV		Pre Ch
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Info		Info
	Text		Text
	Subtitle		Subt
	TV		TV/R





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 You Tube	 Media		
 Netflix	 Smart		
 APPs	 Shift + Media		
 Rec/DVD Menu	 Rec		
 L<<	 L<<		
 >>	 >>		
 Stop	 Stop		
 Rec List/DVD	 D. Menu		
 <<	 <<		
 >>	 >>		
 Play	 Play		
 Pause	 Pause		
 Red/Goto	 Red		
 Green/A-B	 Green		
 Yellow/Angle	 Yellow		
 Blue/Repeat	 Blue		

