


 





 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	NTSC / PAL		Format
	Audio		Dual
	TV / Radio		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV / Radio		TV/R
	Recall		Back






 
 


 

 

 

 









 
 





Originalfernbedienung Ersatzfernbedienung

	Guide		Guide
	i		Info
	Menu		Menu
	Up / CH+		Up
	Down / CH-		Down
	Right / Vol+		Right
	Left / Vol-		Left
	OK		Ok
	Up / CH+		Ch +
	Down / CH-		Ch -
	Right / Vol+		Vol +
	Left / Vol-		Vol -
	↑		Shift + Ch +
	↓		Shift + Ch -
	Exit		Exit
	FAV		Pre Ch
	SAT		Smart





Originalfernbedienung Ersatzfernbedienung

	<<		<<
	Play		Play
	>>		>>
	> <	 + 	Shift + Stop
	>	 + 	Shift + Pause
	Pause		Pause
	Stop		Stop
	<		<<
	>		>>
	Rec		Rec
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text		Text
	Subtitle		Subt

Originalfernbedienung Ersatzfernbedienung

