



 

 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0 / Sleep		0
	0 / Sleep		Sleep / Timer
	TV/Rad		TV/Radio /
	TV / SAT		AV / Input / RDS
	CH+		CH+ / Page+
	CH-		CH- / Page-






 


 






Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	Vol-		Vol-
	Menu		Menu / Home
	Recall		Back / Return
	P+		Shift + CH+ /
	P-		Shift + CH- /
	Text		Text / Goto
	Exit		Exit / Cancel / Clear
	Fav		Fav / Marker / PC
	EPG		Guide / EPG / -/-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Red / V-FMT		Red / Netflix / Search
	Red / V-FMT		Picture / Format



 









Originalfernbedienung **Ersatzfernbedienung**

	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue / Timer		Blue / Prime Video / Random
	Blue / Timer		Shift + Sleep / Timer
	Info		Info / Angle
	Subt		Subtitle / EQ
	Audio		Audio / Lang I/II
	Find		Shift + Red / Netflix /
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<		Shift + Left

Originalfernbedienung **Ersatzfernbedienung**

	II>		Shift + Right
	Movie		Smart / List
	USB		Shift + 8
	USB		Display / Media

