








Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|-------------------------------|
|  | Disc Skip |  | Blue / Prime Video / Random |
|  | Sleep |  | Sleep / Timer |
|  | Power |  | Power |
|  | CD Play |  | Play / Slow |
|  | Pause |  | Pause / Step / Freeze |
|  | Stop |  | Stop / Hold |
|  | Tuner/Band |  | Yellow / YouTube / Repeat |
|  | I<< |  | I<< / Preset- |
|  | >>I |  | >>I / Preset+ |
|  | Deck A Play |  | Red / Netflix / Search |
|  | << |  | << / Tune- |
|  | >> |  | >> / Tune+ |
|  | Deck B Play |  | Green / APP / Repeat |
|  | Check |  | Display / Media |
|  | Clear |  | Exit / Cancel / Clear |
|  | MD Play |  | Shift + Play / |
|  | Pause MD |  | Shift + Pause / Step / Freeze |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|----------------|
|  | Stop MD |  | Shift + Stop / |
|  | Loop |  | Smart / List |
|  | Flash |  | Info / Angle |
|  | Function |  | Menu / Home |
|  | Up |  | Up |
|  | Vol + |  | Vol+ |
|  | On / Off |  | OK |
|  | Down |  | Down |
|  | Vol - |  | Vol- |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

