 




 
 

 
 
 

 




 

 


 
 


 
 
 
 




 
 

 






 
 
 
 
 

 







 












Originalfernbedienung Ersatzfernbedienung

|   |              |   |       |
|---|--------------|---|-------|
|    | Power        |    | Power |
|    | Open / Close |    | Eject |
|    | 1            |    | 1     |
|    | 2            |    | 2     |
|    | 3            |    | 3     |
|    | 4            |    | 4     |
|    | 5            |    | 5     |
|    | 6            |    | 6     |
|    | 7            |    | 7     |
|    | 8            |    | 8     |
|  | 9            |  | 9     |
|  | 0            |  | 0     |
|  | Audio        |  | Dual  |
|  | Set          |  | Smart |
|  | Subtitle     |  | Subt  |
|  | Angle        |  | Media |
|  | Prog+        |  | Ch +  |

Originalfernbedienung Ersatzfernbedienung

|   |              |   |              |
|---|--------------|---|--------------|
|    | Prog-        |    | Ch -         |
|    | Input Select |    | AV           |
|    | TV / DVD     |    | TV/R         |
|    | Top Menu     |    | Shift + Menu |
|    | Menu         |    | Menu         |
|    | System Menu  |    | D. Menu      |
|    | Title List   |    | List         |
|    | Timer        |    | Sleep        |
|    | Display      |    | Info         |
|    | Timer List   |    | Mute         |
|  | Up           |  | Up           |
|  | Left         |  | Left         |
|  | Enter        |  | Ok           |
|  | Right        |  | Right        |
|  | Down         |  | Down         |
|  | Return       |  | Back         |
|  | Options      |  | Options      |



