



Originalfernbedienung	Ersatzfernbedienung
	Single
	Clear
	Time
	1
	2
	3
	4
	5
	6
	7
	8
	9
	10
	SHIFT + 1
	SHIFT + 2
	SHIFT + 3
	SHIFT + 4

Originalfernbedienung	Ersatzfernbedienung
	15
	16
	17
	18
	19
	20
	+10
	Clear Repeat
	A↔B
	Line Out Volume+
	Line Out Volume-
	Play
	Pause
	Stop (Reset)
	Continue
	Shuffle Play
	PGM

	Shift + 5
	Shift + 6
	Shift + 7
	Shift + 8
	Shift + 9
	Shift + 0
	Pre Ch
	Text
	TV/R
	Vol +
	Vol -
	Play
	Pause
	Stop
	Yellow
	Blue
	Options





Originalfernbedienung Ersatzfernbedienung

	>>		>>
	<<		<<
	<<		<<
	>>		>>
	← Index		Ch -
	Index →		Ch +

Originalfernbedienung Ersatzfernbedienung


