







Originalfernbedienung Ersatzfernbedienung

	Tv/Video		TV/Radio /
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--
	10/0		0
	Enter		OK
	Vol+		Vol+
	Vol-		Vol-
	CH-		CH- / Page-

Originalfernbedienung Ersatzfernbedienung

	CH+		CH+ / Page+
---	-----	---	-------------



 







 





 







 







 






Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep / Timer
	Timer Menu	 + 	Shift + Sleep / Timer
	Theatre Sync		Red / Netflix / Search
	Power		Power
	Display		Display / Media
	Time/Text		Text / Goto
	Dimmer		Mute / Dimmer
	Function+		CH+ / Page+
	Key Control b		Smart / List
	Key Control #	 + 	Shift + Smart / List
	Score		Setup / OPT /
	Function-		CH- / Page-
	Karaoke Mode		Sound / Title
	Karaoke Pon		Yellow / YouTube / Repeat
	Repeat/FM		Green / APP / Repeat
	Picture Navi		Picture / Format
	1		1

Originalfernbedienung Ersatzfernbedienung

	2		2
	3		3
	Audio		Audio / Lang I/II
	4		4
	5		5
	6		6
	Subtitle		Subtitle / EQ
	7		7
	8		8
	9		9
	Angle		Info / Angle
	Clear		Exit / Cancel / Clear
	0		0
	Folder-	 + 	Shift + CH- /
	Folder+	 + 	Shift + CH+ /
	DVD Top Menu		D.Menu / Top
	DVD/USB/Tuner		Menu / Home

 







Originalfernbedienung Ersatzfernbedienung

	EQ		Shift + Subtitle / EQ
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Volume+		Vol+
	Down		Down
	Display/[ *]		Shift + Display / Media
	Volume-		Vol-
	Return		Back / Return
	I<</Preset-		I<< / Preset-
	←/Replay/◀I Step		Shift + Left
	→/Advance/Step I>		Shift + Right
	>>I/Preset+		>>I / Preset+
	<</Tuning -/◀I		<< / Tune-
	Play		Play / Slow
	>>/Tuning		>> / Tune+

Originalfernbedienung Ersatzfernbedienung

	Pause		Pause / Step / Freeze
	Stop		Stop / Hold



+/Slow I>