



| Originalfernbedienung | | Ersatzfernbedienung | | Originalfernbedienung | | Ersatzfernbedienung | |
|---|----------------|---|-------|-----------------------|--|---------------------|--|
|  | Vol+ |  | Vol + | | | | |
|  | Vol- |  | Vol - | | | | |
|  | Play CD |  | Play | | | | |
|  | Pause CD |  | Pause | | | | |
|  | Stop CD |  | Stop | | | | |
|  | I<< CD |  | I<< | | | | |
|  | >>I CD |  | >>I | | | | |
|  | Disc Skip CD |  | Smart | | | | |
|  | Tuner Preset + |  | Ch + | | | | |
|  | Tuner Preset - |  | Ch - | | | | |
|  | Function Tape |  | 1 | | | | |
|  | Function Tuner |  | 2 | | | | |
|  | Function CD |  | 3 | | | | |
|  | Function Phono |  | 4 | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

