











 













 

























 



















Originalfernbedienung Ersatzfernbedienung

	Eject		Eject / Surround
	Power		Power
	Display / [i+]		Display / Media
	Format		Picture / Format
	Audio Monitor		Audio / Lang I/II
	Counter / Remain		Smart / List
	Clear		Exit / Cancel / Clear
	TV / Video		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	-/--		Guide / EPG / -/--
	0		0
	Input Select		AV / Input / RDS
	Vol+		Vol+
	Prog+		CH+ / Page+
	Vol-		Vol-
	Prog-		CH- / Page-
	Rec		Rec / Rec Mode
	Slow		Shift + Play /
	x2		Shift + >> /
	SP / LP		D.Menu / Top
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Menu		Menu / Home
	Up		Up
	Pause		Pause / Step / Freeze
	Timer		Sleep / Timer





Originalfernbedienung Ersatzfernbedienung

































 

	Left		Left
	<<		<< / Tune-
	OK		OK
	Play		Play / Slow
	Right		Right
	>>		>> / Tune+
	Down		Down
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Display		Display / Media
	Format		Picture / Format
	Audio Monitor		Audio / Lang I/II
	TV / Video		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--
	0		0
	Vol+		Vol+

Originalfernbedienung Ersatzfernbedienung

	Prog+		CH+ / Page+
	Vol-		Vol-
	Prog-		CH- / Page-

