

 







 

 

 

 

 

 

 

 

 

 

 

 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|--------------------|
|  | Power |  | Power |
|  | Sound |  | Sound / Title |
|  | Mega Bass |  | Audio / Lang I/II |
|  | Function |  | Menu / Home |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | Mode |  | Picture / Format |
|  | 0/10 |  | 0 |
|  | >10 |  | Guide / EPG / -/-- |
|  | Play |  | Play / Slow |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-------|--|-----------------------|
|  | I<< |  | I<< / Preset- |
|  | >>I |  | >>I / Preset+ |
|  | Pause |  | Pause / Step / Freeze |
|  | << |  | << / Tune- |
|  | >> |  | >> / Tune+ |
|  | Stop |  | Stop / Hold |
|  | Tune+ |  | Shift + >> / |
|  | Vol+ |  | Vol+ |
|  | Band |  | TV/Radio / |
|  | Tune- |  | Shift + << / |
|  | Vol- |  | Vol- |

