
 






 


 



 


 







Originalfernbedienung	Ersatzfernbedienung
	 Power
	 1
	 2
	 3
	 Back / Return
	 AV / Input / RDS
	 4
	 5
	 6
	 Exit / Cancel / Clear
	 Info / Angle
	 7
	 8
	 9
	 Smart / List
	 CH+ / Page+
	 0

Originalfernbedienung	Ersatzfernbedienung
	 Guide / EPG / -/-
	 Fav / Marker / PC
	 Display / Media
	 CH- / Page-
	 Shift + 1
	 Shift + 2
	 Shift + 3
	 Shift + 4
	 Shift + 5
	 Shift + Pause / Step /
	 I<< / Preset-
	 >>I / Preset+
	 Play / Slow
	 << / Tune-
	 >> / Tune+
	 Stop / Hold
	 Rec / Rec Mode





Originalfernbedienung   Ersatzfernbedienung

	Pause		Pause / Step / Freeze

Originalfernbedienung   Ersatzfernbedienung