

 









 



 




 


 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Reset		Guide / EPG / -/--
	0 / AV PC		0
	RTN		Back / Return
	Display		Display / Media
	Up / P+		Up
	Up / P+		CH+ / Page+
	Input		AV / Input / RDS











 





 




 


 



Originalfernbedienung Ersatzfernbedienung

	Left / V-		Left
	Left / V-		Vol-
	Menu / Enter		Menu / Home
	Menu / Enter		OK
	Right / V+		Right
	Right / V+		Vol+
	ARC		Info / Angle
	Down / P-		Down
	Down / P-		CH- / Page-
	Exit		Exit / Cancel / Clear
	Text		Text / Goto
	Text Subcode		Subtitle / EQ
	PIP Up		Shift + Up
	PIP Position		Shift + Left
	PIP On/Off		Shift + OK
	PIP Size		Shift + Right
	PIP Down		Shift + Down





**Originalfernbedienung    Ersatzfernbedienung**

	Text Reveal		Play / Slow
	Text Index		Smart / List
	Text Hold		Stop / Hold
	Text Cancel		Rec / Rec Mode
	Text Size		Zoom / Size
	Green / MUP		Green / APP / Repeat
	Yellow / Pause		Yellow / YouTube / Repeat
	Yellow / Pause		Pause / Step / Freeze
	Blue / Audio		Blue / Prime Video / Random
	Blue / Audio		Audio / Lang I/II
	Red / Picture		Red / Netflix / Search
	Red / Picture		Setup / OPT /
	Sleep		Sleep / Timer
	Mute		Mute / Dimmer

**Originalfernbedienung    Ersatzfernbedienung**