





















 







 





 








Originalfernbedienung Ersatzfernbedienung






 








 




	Standby		Power
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II
	Open/Close		Eject / Surround
	Angle		Info / Angle
	Title		Sound / Title
	Vol+		Vol+
	Prog		TV/Radio /
	Menu		Menu / Home
	Vol-		Vol-
	Setup		Setup / OPT /
	Up		Up
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Left		Left
	Enter		OK
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Down		Down
	Stop		Stop / Hold
	1		1
	2		2
	3		3
	Goto		Text / Goto
	4		4
	5		5
	6		6
	Clear		Exit / Cancel / Clear
	7		7
	8		8
	9		9
	0		0
	<<		<< / Tune-
	>>		>> / Tune+





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 I<<	 I<< / Preset-		
 >>I	 >>I / Preset+		
 P/N	 Red / Netflix / Search		
 Display	 Display / Media		
 Zoom	 Zoom / Size		
 Slow	 Shift + Play /		
 Step	 Shift + Pause / Step /		
 A-B	 Yellow / YouTube / Repeat		
 Repeat	 Green / APP / Repeat		
 V-Mode	 Picture / Format		

