 

 



 








Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Repeat		Back
	A-B Repeat		Smart
	Subtitle		Subt
	Title / TTX		Text
	Menu		Menu
	Display		Info
	DVD / DVB		AV
	TV / Radio		TV/R
	Cancel		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	PRO / EPG		Guide
	+10		Pre Ch
	Search		Shift + TV/R
	Setup		Options
	Audio		Dual
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Ent		Ok
	Zoom		Eject
	Slow		Sleep
	Disc / U / C		Media
	Angle		Format





**Originalfernbedienung Ersatzfernbedienung**

	Vol +		Vol +
	Vol -		Vol -
	PBC		List
	Mute		Mute
	>>I / CH +		>>I
	>>I / CH +		Ch +
	I<< / CH -		I<<
	I<< / CH -		Ch -
	<< FR		<<
	FF >>		>>
	Play / Pause		Play
	Play / Pause		Pause
	Stop		Stop

**Originalfernbedienung Ersatzfernbedienung**