



 

 

 











 

 

 

 

 






 








 

 


 

 

 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Language		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Open/Close		Eject / Surround
	Title/TTX		Picture / Format
	Zoom		Zoom / Size
	Time		Sleep / Timer
	TV/Radio		TV/Radio /
	N/P		D.Menu / Top

Originalfernbedienung Ersatzfernbedienung

	Setup		Setup / OPT /
	L/R		Text / Goto
	DVD/DVB		AV / Input / RDS
	Menu/PBC		Menu / Home
	UP		Up
	Angle		Info / Angle
	Fav-/Left		Left
	Enter		OK
	Fav+/Right		Right
	Clear		Exit / Cancel / Clear
	Down		Down
	Return		Back / Return
	Vol+		Vol+
	Prog/EPG		Smart / List
	Vol-		Vol-
	OSD		Display / Media
	1		1





Originalfernbedienung Ersatzfernbedienung

2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
+10	+10	GUIDE EPG	Guide / EPG / -/--
+10	0/10	HDMI - SAT 0	0
REPEAT	Repeat	APP REPEAT	Green / APP / Repeat
A-B	A-B	YouTube REPEAT A-B	Yellow / YouTube / Repeat
SLOW	Slow	SHIFT + SLOW	Shift + Play /
STEP	Step	SHIFT + STEP - FREEZE	Shift + Pause / Step /
VIDEO	Video	SHIFT + VIDEO 4	Shift + 4
USB	USB	SHIFT + USB 8	Shift + 8

Originalfernbedienung Ersatzfernbedienung

