
 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	TV Sys		TV/R
	Audio		Dual
	SUB-T		Subt
	Goto		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Select		D. Menu









 

 





 

 
 

 


Originalfernbedienung Ersatzfernbedienung

	Confirm		Smart
	Guide		Guide
	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Info		Info
	I<<		I<<
	>>I		>>I
	Play		Play
	Pause		Pause
	Stop		Stop
	Edit		Exit





Originalfernbedienung Ersatzfernbedienung

	<<		<<
	>>		>>
	←·		Ch -
	·→		Ch +
	Slow		AV
	Zoom		Eject
	Repeat		Text
	A-B		3D
	Media		Media
	Music		Red
	Photo		Green
	Setup		Menu

Originalfernbedienung Ersatzfernbedienung

