



**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Tv/AV		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Eject		Eject
	Play/Pause		Play
	Stop		Stop
	Return		Back

**Originalfernbedienung Ersatzfernbedienung**

	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	Up		Up
	CH+		Ch +
	CH-		Ch -
	Down		Down
	Right		Right
	Left		Left
	Sys Menu		Menu
	Display		Shift + Info
	OK		Ok
	Picture		Format
	Sound		Dual
	Timer		Shift + AV
	Nicam/A2		Media
	Lan/Prog-		Shift + Ch -



