 
 


 
 


 

 






 
 



 




**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Premium On		Smart
	Guida		Guide
	Lista		List
	Info		Info
	Vol+		Vol +
	Vol-		Vol -
	Prog+		Ch +
	Prog-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Back		Back
	Exit		Exit
	Stop		Stop

**Originalfernbedienung Ersatzfernbedienung**

	Play		Play
	Pause		Pause
	>>		>>
	<<		<<
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	Opzioni		Options
	Text		Text





Originalfernbedienung   Ersatzfernbedienung

	APP		Media
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue/Recall		Blue

Originalfernbedienung   Ersatzfernbedienung