 


 



 



 


 

 


 

 

 
 

 

 








Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Recall		Back
	Menu		Menu
	Exit		Exit
	Tv/AV		AV

Originalfernbedienung    Ersatzfernbedienung

	EPG		Shift + Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	CH+		Ch +
	CH-		Ch -
	FAV+		Shift + Ch +
	FAV-		Shift + Ch -
	Vol+		Vol +
	Vol-		Vol -
	Sleep		Sleep
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	FAV		Pre Ch
	Display		Info



